

How to replace the nose pad arm


ETHEREAL EYEWEAR



Tools




STEP - 1

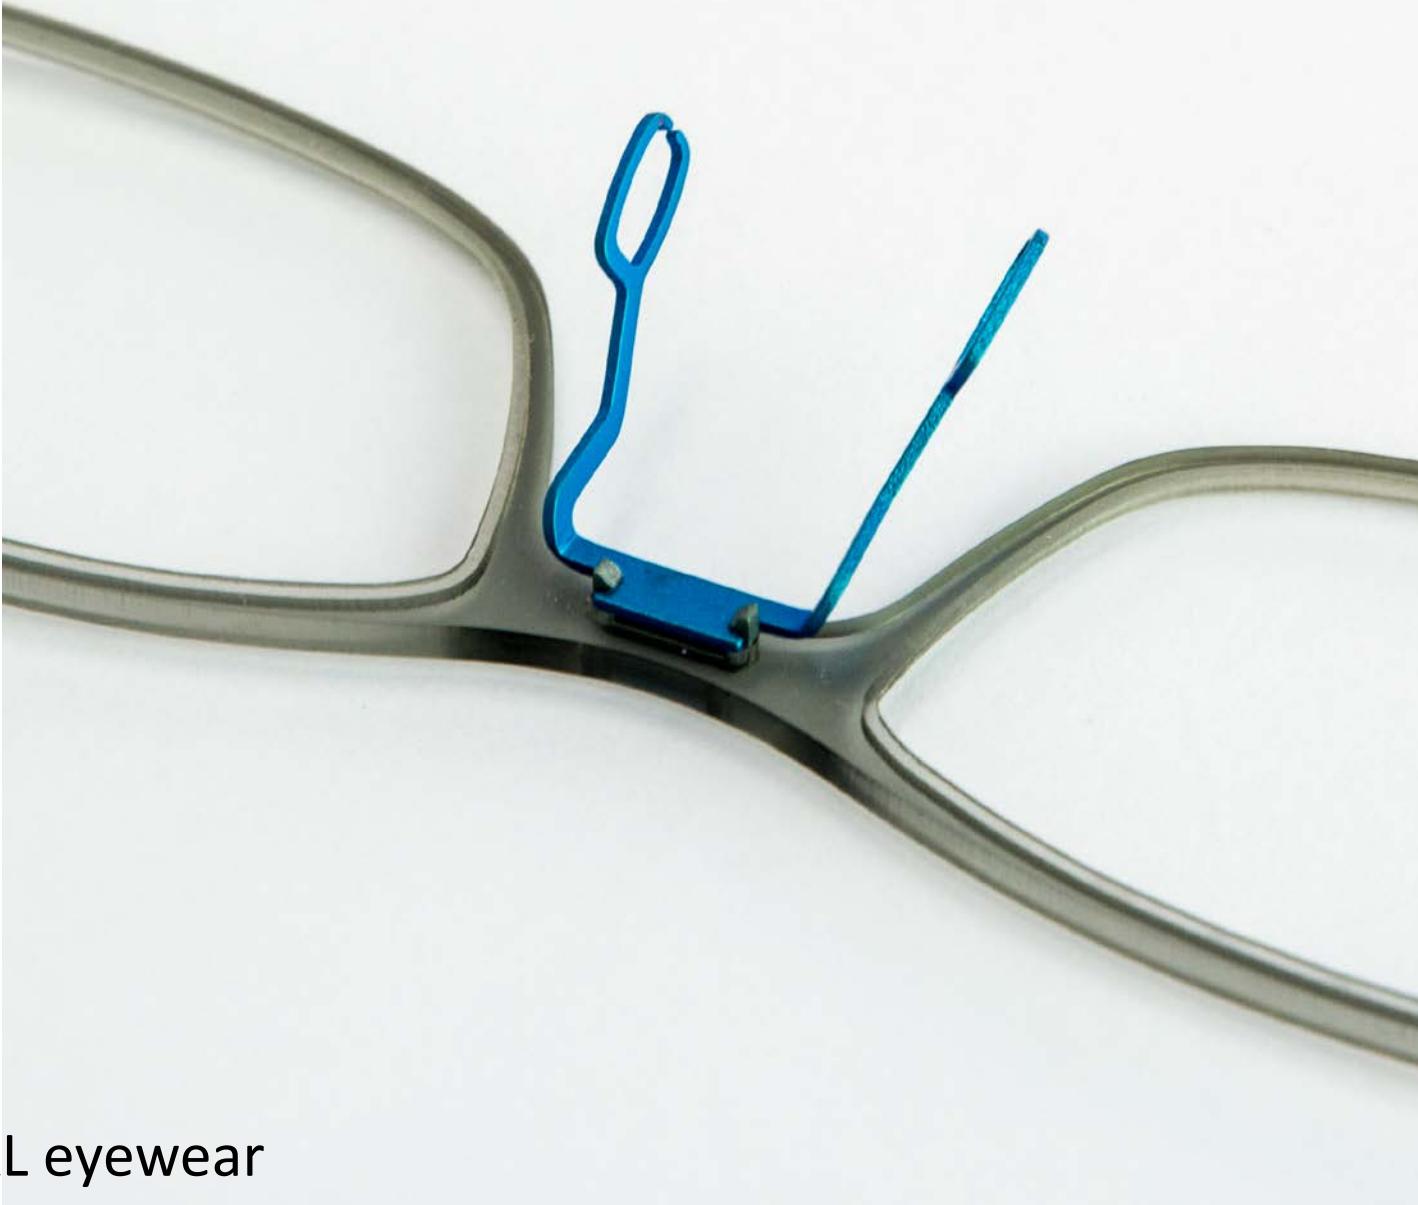

Find your ETHEREAL eyewear



STEP - 2

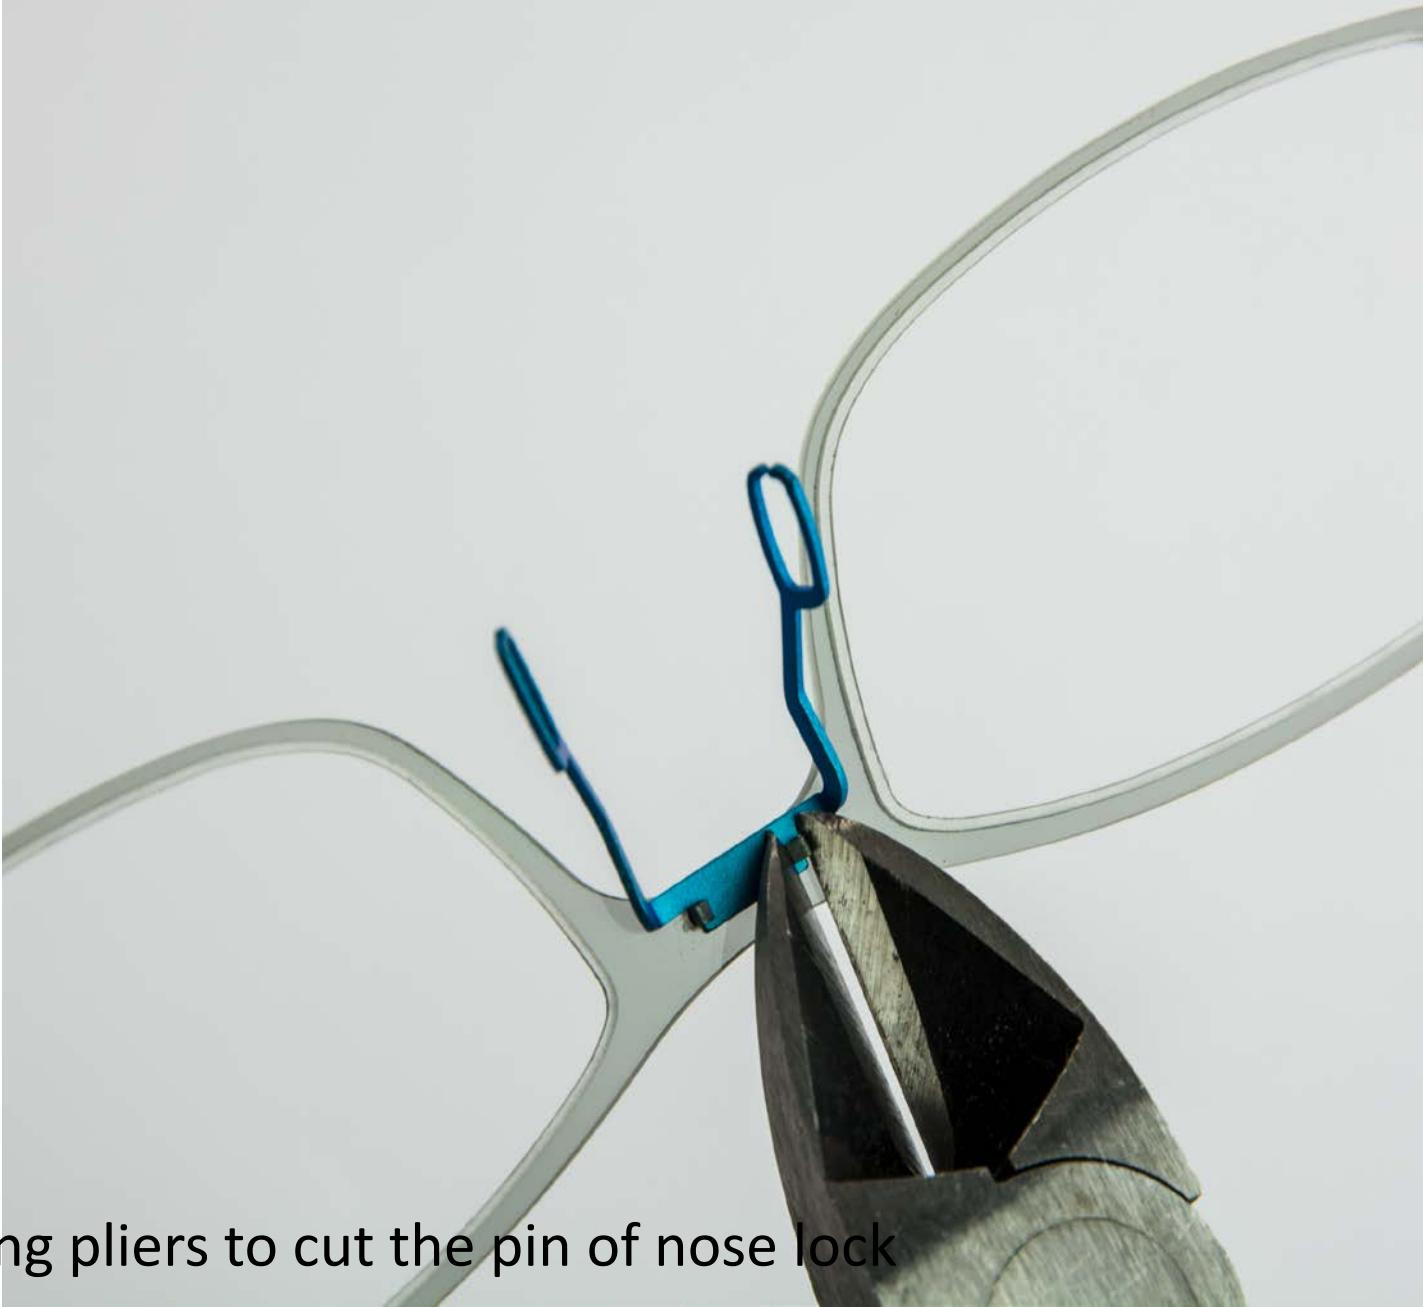

Take diagonal cutting pliers to cut the pin of nose lock



STEP - 3



Try to cut that at the bottom




STEP - 4



After cutting one pin of the nose lock



STEP - 5

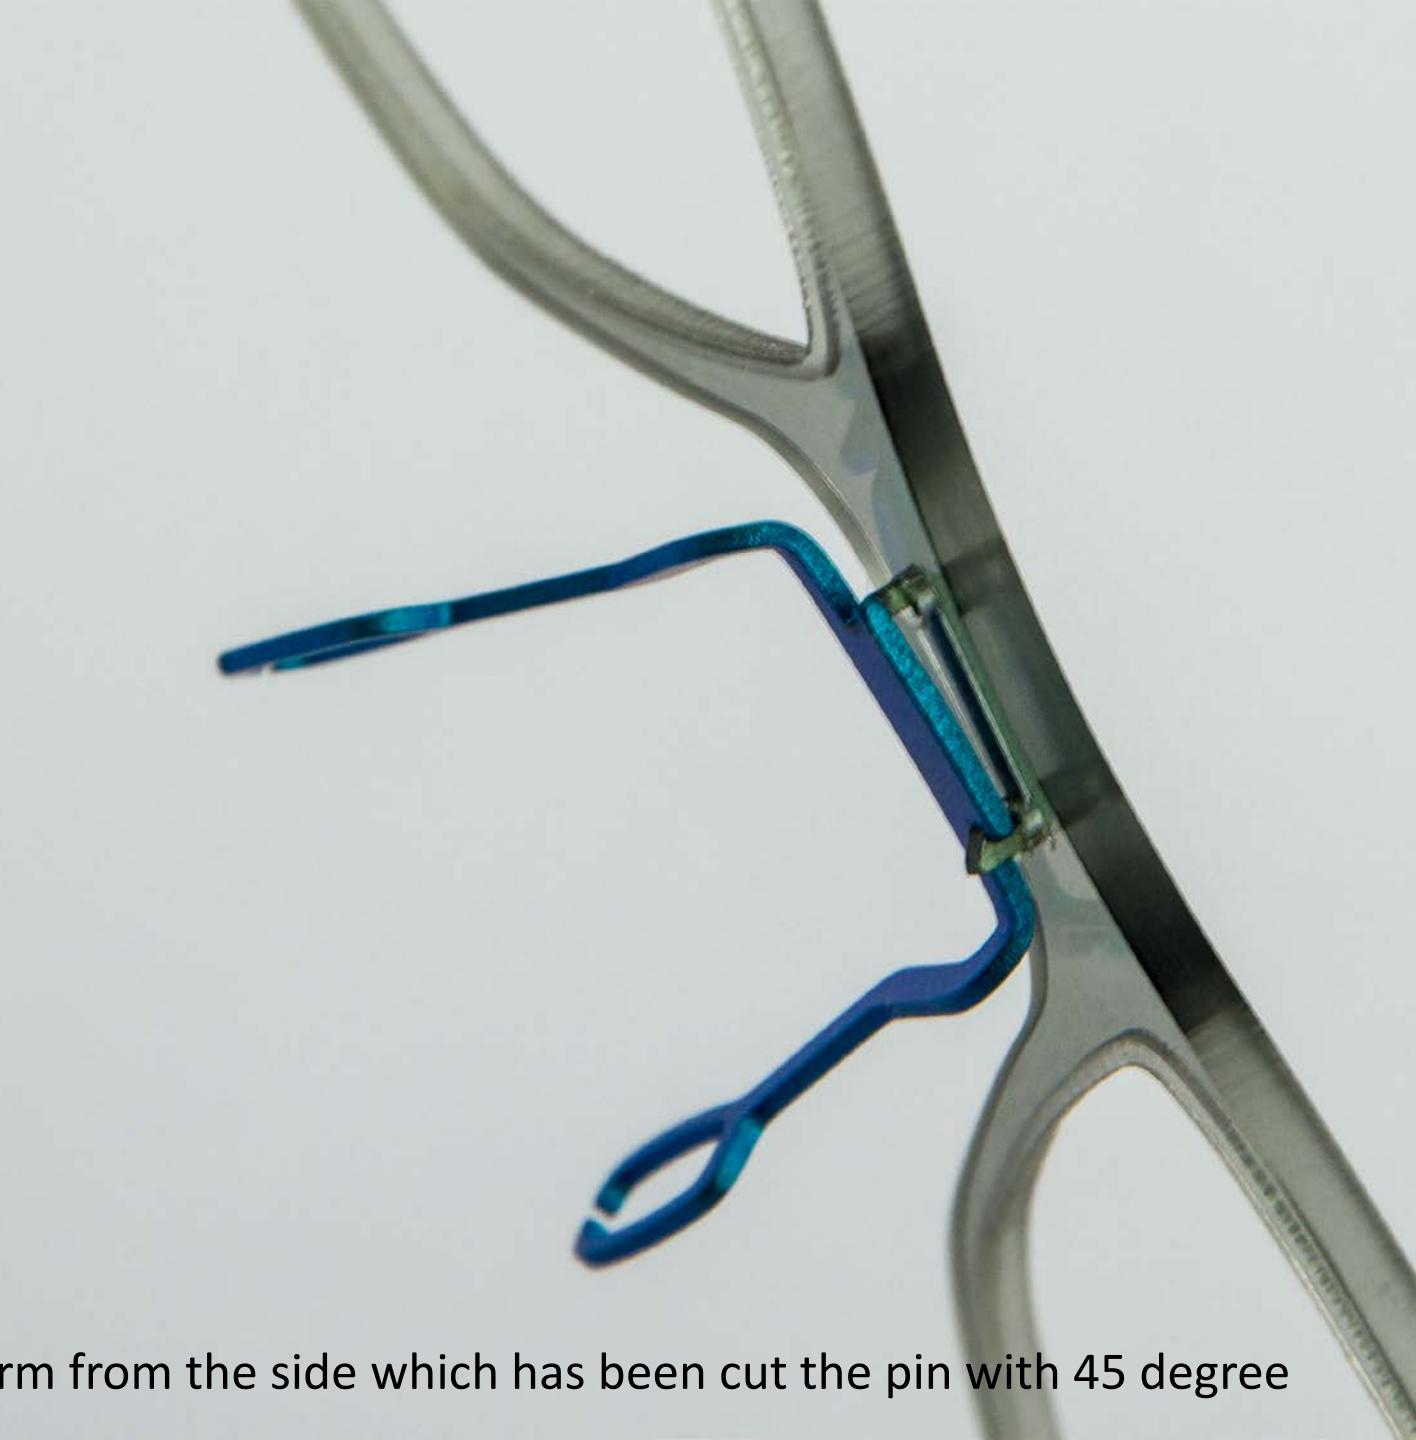

Pull out the nose pad arm from the side which has been cut the pin with 45 degree




STEP - 6



Pull out the broken nose lock



STEP - 7

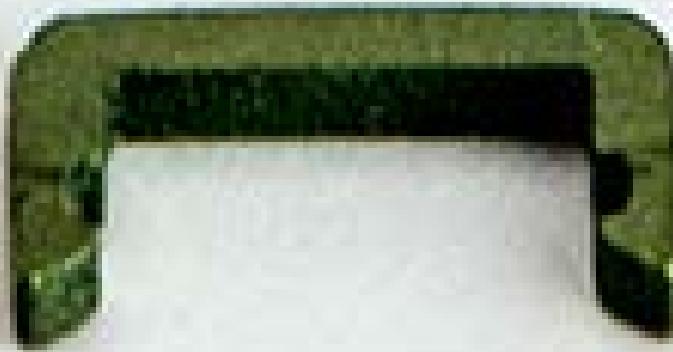

Put a new nose lock into the eyewear



STEP - 8

Try to push to the bottom



STEP – 9A



Put the new nose pad arm into one side of the nose lock



STEP – 9B



Put the new nose pad arm into one side of the nose lock




STEP - 10



Take the pliers which we send to you to press the nose pad arm




STEP - 11

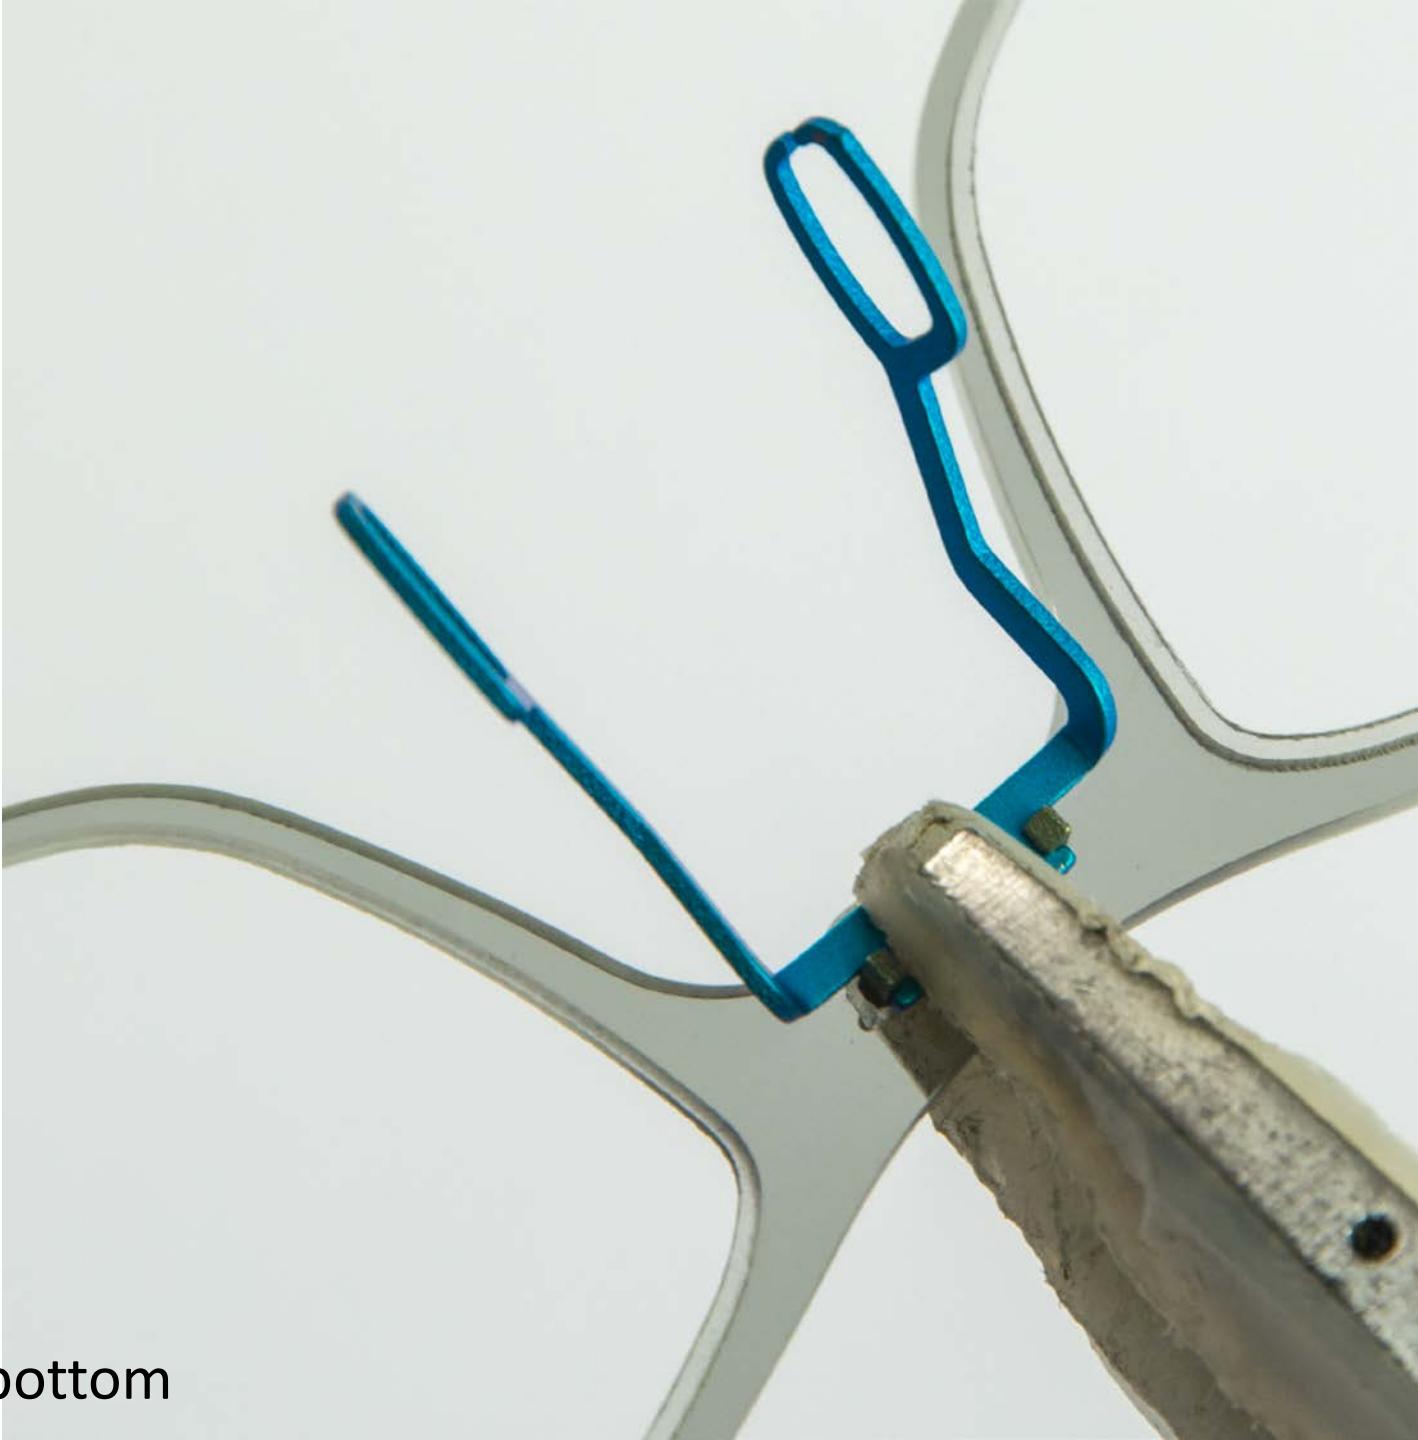

Try to push to the bottom



STEP - 12

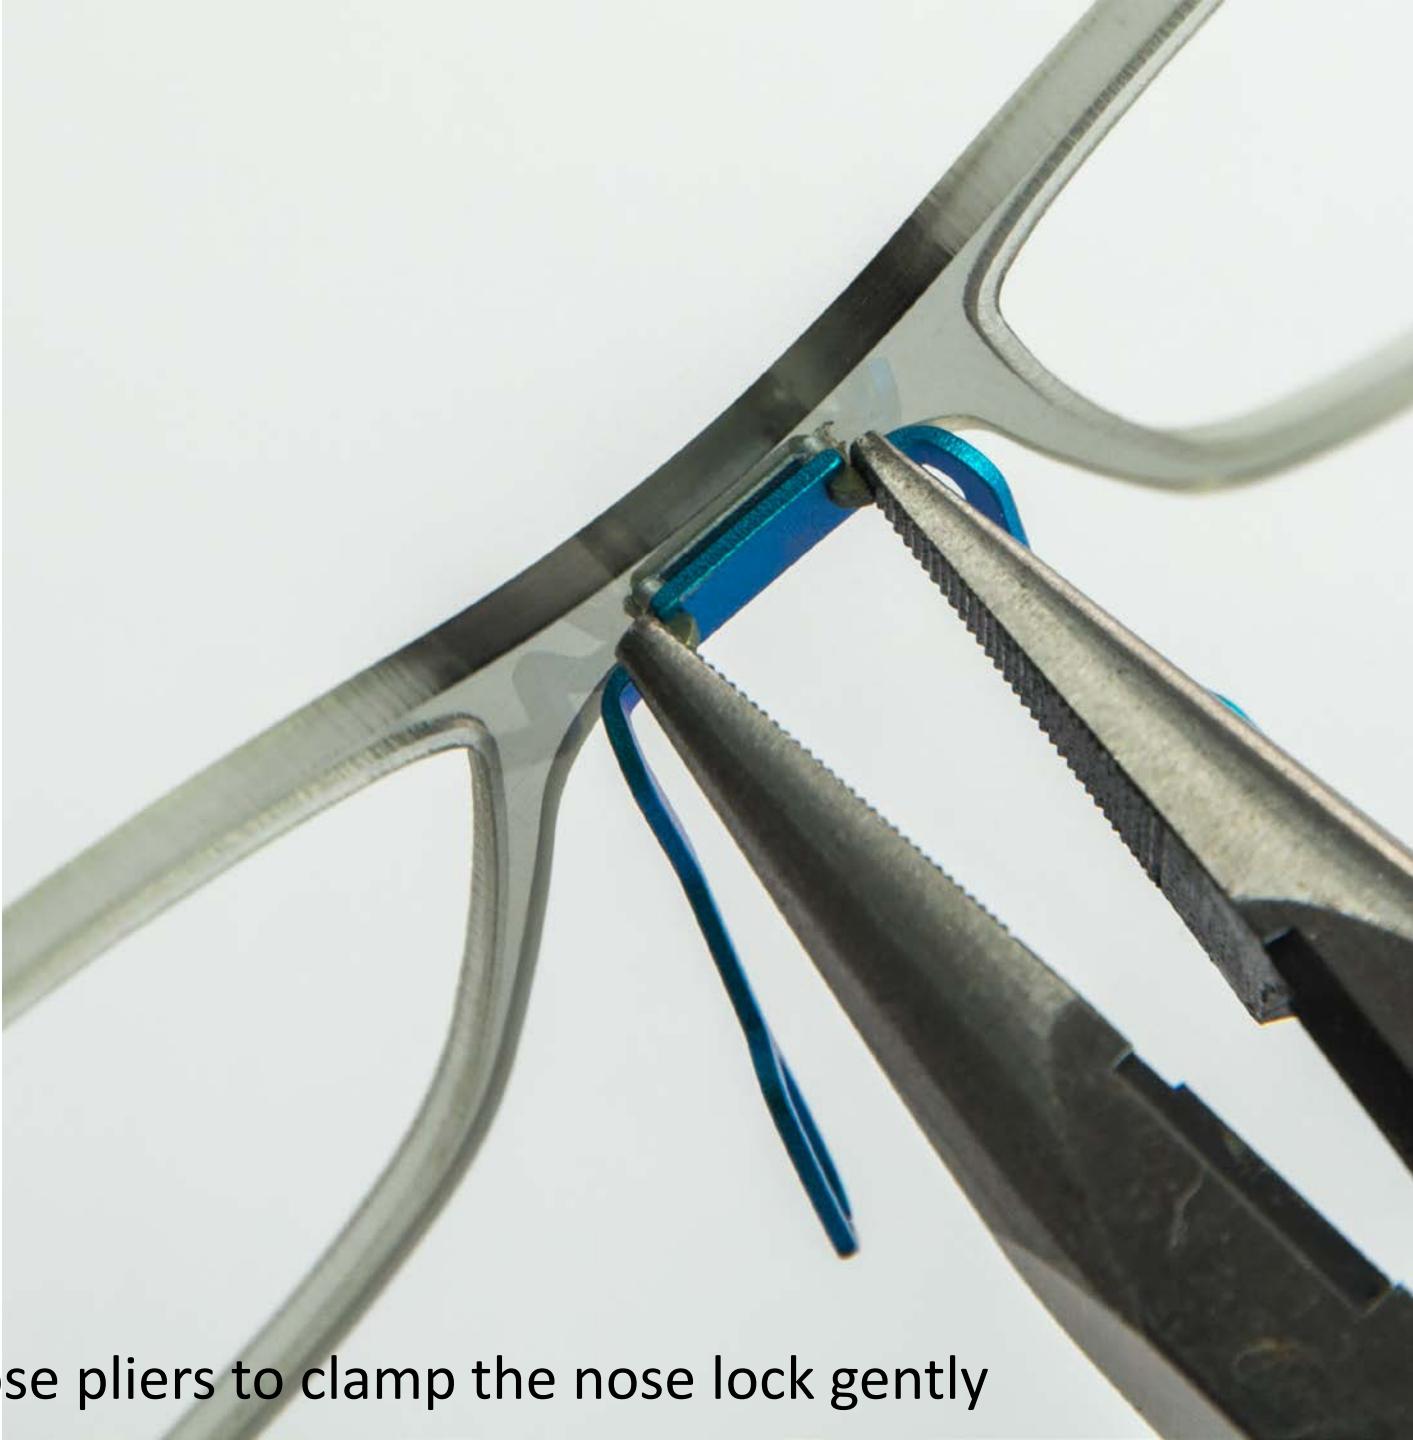

Take the needle-nose pliers to clamp the nose lock gently

